

Label Loading Instruction



Ready to load




Pull down on the forward part of the printbase. This will open the path for the labels to pass through



Pass labels through the label path as shown.



Note: When threading the labels do not pass them through the roller A.

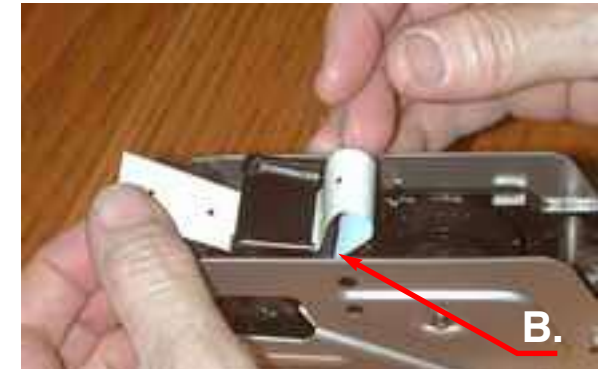

Pass labels through the slot in the printbase B.



Fold labels back over and align holes in the labels with pins on the sprocket C.



Close the bottom cover. (Label waste is dispensed between the handles.) Your price-marker is now loaded and ready for action!



SATO AUTO-ID MALAYSIA SDN BHD
SATO MALAYSIA SDN BHD
No. 38 & 25, Jalan Pemberita U1/49,
Temasya Industrial Park,
Section U1, 40150 Shah Alam,
Selangor Darul Ehsan.
(T) : +603 7620 8901
(F) : +603 5569 4977
(E) : sales-sam@sato-global.com